

P 5-25 e

»R26BA« series, both sides sealing

Couplings, stems and plugs are fitted with a valve. both sides Connection: Both valves open and the medium is allowed to pass. sealing Disconnection: Both valves close and the medium is prevented from escaping. Areas of application: Pneumatic system, machine and plant engineering, Measurement, monitoring And control systems, Manufacturing industry, medical technology, chemical / pharmaceutical industry, automotive, food technology, aerospace.

Operating pressure

Medium and ambient temperature Housing, sleeve and valve body Spring, retaining ring and balls Sealant Media

0 - 35 bar, maximum static working pressure (non-pulsating) -20 °C to 100 °C Brass with a bare metal surface Stainless steel NBR Compressed air, water, neutral gases and liquids



243.01-B



243.33-B



243.45-B


Quick disconnect coupling DN 7.2, both sides sealing, brass with a bare metal surface, male								
Type No.	Article No.	Connection	a/f	L	D	L1		
	AITICIE NO.	connection	mm	mm	mm	mm		
243.01-B	107506	G 1/4 male	22	40.0	24.8	9.0		
243.02-В	107507	G 3/8 male	22	41.0	24.8	10.0		
243.03-В	107508	G 1/2 male	24	41.0	24.8	12.0		


Quick disconnect coupling DN 7.2, both sides sealing, brass with a bare metal surface, female								
Type No.	Article No.	Connection	a/f	L	D	L1		
	ALLICIE NO.	Connection	mm	mm	mm	mm		
243.11-B	107509	G 1/4 female	22	41.0	24.8	9.0		
243.22-В	107510	G 3/8 female	22	41.0	24.8	10.5		
243.33-B	107511	G 1/2 female	24	42.5	24.8	12.0		

Quick disconnect coupling DN 7.2, both sides sealing, brass with a bare metal surface, with hose stem								
Type No.	Article No.	Connection	a/f	L	D	L1		
	AITICIE NO.	Connection	mm	mm	mm	mm		
243.44-B	107512	Stem, I.D 6	22	58.5	24.8	25.0		
243.47-В	107513	Stem, I.D 8	22	58,5	24.8	25.0		
243.45-B	107514	Stem, I.D 9	22	58.5	24.8	25.0		
243.49-B	107515	Stem, I.D 10	22	58.5	24.8	25.0		
243.46-B	107516	Stem, I.D 13	22	58,5	24.8	25.0		

RIEGLER & Co. KG, eDocumentation Edition 02/2024 Page 1 of 3 Schützenstraße 27 | 72574 Bad Urach Tel. +497125 9497-41 | -260 | -620 eDocumentation@riegler.de Subject to technical changes an errors reserved. The proficiency testing is the responsibility of the user. The specified data do not represent legally guaranteed properties

Flow rates:

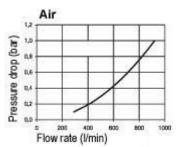


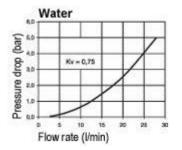


Р 5-25_е


Quick disconnect couplings DN 7.2 Art. No. 107506 to 107529





male







Stem for couplings DN 7.2 - DN 7.8, both sides sealing, brass with a bare metal surface							
Type No.	Article No.	Description	a/f	L	L1		
Type No.		Description	mm	mm	mm		
243.06-В	107517	Stem, I.D 6	22	61.5	25.0		
243.351-B	107518	Stem, I.D 8	22	61.5	25.0		
243.07-В	107519	Stem, I.D 9	22	61.5	25.0		
243.352-В	107520	Stem, I.D 10	22	61.5	25.0		
243.10-В	107521	Stem, I.D 13	22	61.5	25.0		

Plug for couplings DN 7.2 - DN 7.8, both sides sealing, brass with a bare metal surface, male						
Type No.	Article No.	Description	a/f	L	L1	
Type No.	AITICIE NO.	Description	mm	mm	mm	
243.48-B	107522	Plug, G 1/8 male	22	41.0	7.0	
243.50-В	107523	Plug, G 1/4 male	22	43.0	9.0	
243.51-B	107524	Plug, G 3/8 male	22	44.0	10.0	
243.52-B	107525	Plug, G 1/2 male	24	44.0	12.0	


Plug for couplings DN 7.2 - DN 7.8, both sides sealing, brass with a bare metal surface, female						
Type No.	Article No.	Description	a/f	L	L1	
		Description	mm	mm	mm	
243.54-B	107526	Plug, G 1/8 female	22	42.0	9.0	
243.55-B	107527	Plug, G 1/4 female	22	44.0	10.5	
243.56-B	107528	Plug, G 3/8 female	22	44.0	10.5	
243.57-В	107529	Plug, G 1/2 female	24	45.5	12.0	



Stem



Plug male





243.07-B



243.50-B



243.55-B

L1



Р 5-25_е

Installation location

The installation location of the quick-connect coupling must be selected so that the health of the person operating it cannot be harmed by sources of danger in the immediate surroundings, e.g. from slipping, jamming, contaminating or burning.

Service manual

Quick-connect couplings are predominantly maintenance-free, if used in standard applications and handled carefully. The selection of the quick-connect coupling must be compatible with the intended purpose of use and material. Depending on the operating conditions it is recommended to provide the following points during maintenance:

External visual inspection with dirt in the functioning area of coupling and plug (seal area, control elements) these must be cleaned. The following distinguishing symptoms require replacement of the corresponding parts: Torn, damaged, heavily damaged or corroded parts, leaks on coupling and / or plug parts.

Function test under maximum Max. operating pressure can be used to test the quick-connect coupling for possible malfunctions and leaks. During the testing and operating phase it must be ensured that the operating personnel work protected.

Replacement intervals for quick-connect couplings must, if available, be adapted to the state or technical standards. However, also operating experiential values, which result from the required operational safety and the conditions of use, such as downtimes, coupling frequency, Max. operating pressure and properties of the medium, are critical for establishing the replacement intervals.

Low pressure applications


Threads for low-pressure applications are, if seriesrelated no corresponding coatings or sealing rings are present, to be provided with suitable sealing materials, such as a PTFE belt or liquid sealing agent. Here the resistance to the flowing medium must be paid attention to.

Pulsating tool

When using pulsating tools it is recommended to observe the standard ISO 6150, § 7.1. It recommends installing a minimum 300 mm long, flexible hose between the pulsating tool and the quick-connect coupling. The oscillating forces are taken by the hose piece and thus increase the service life of the quick-connect coupling. No warranty can be made for couplings mounted directly on pulsating tools.

Flow direction

The recommended flow direction is from the coupling to the plug if nothing else is specified in the technical data sheet.



Application with hoses

When using hoses the permissible Max. operating pressure and the working temperature must absolutely be observed and suitable hose connections must be seen to.